




Instructions for use of honeycomb paper dispenser


MODEL:HP50-02

VERSION:202009


www.AirPackagingMachine.com

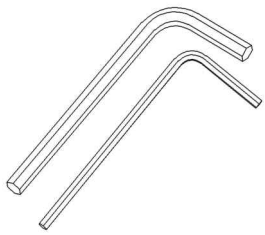


X2

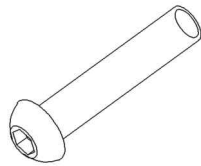


X4

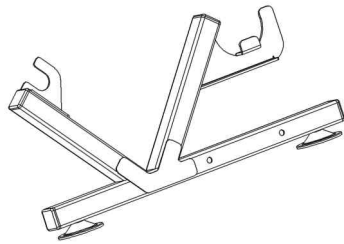


X1

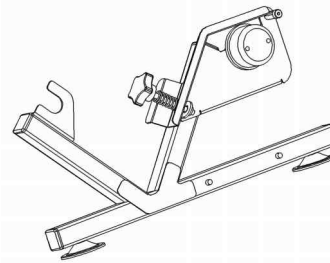

X1

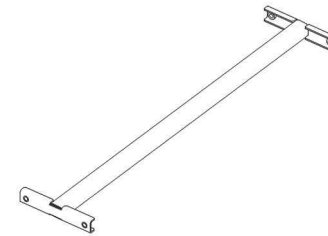


X1

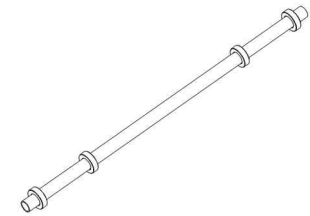

X1


①

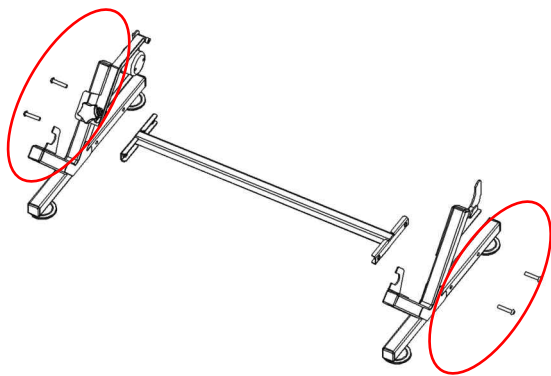

1.Pass the matching screws into the corresponding holes.

2.Then lock the left and right brackets with the middle crossbar.


②

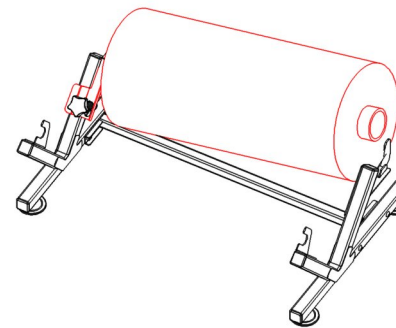

1.Lift up the honeycomb roll and put one side into the left stents.


2.After supporting one side of the honeycomb roll, lift up the pressure adjusting plate with your left hand.

③

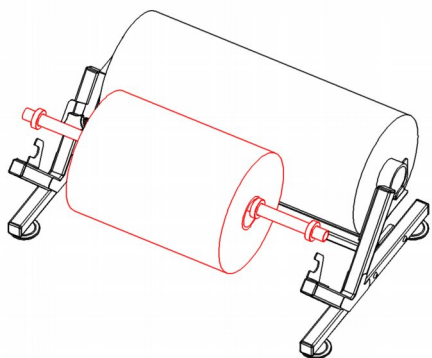

1.Pass the white backing paper support rod into the tube core, lift it into the support frame.

④

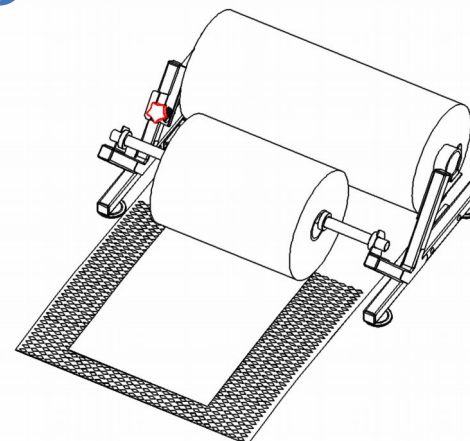

1.If the honeycomb shape cannot be pulled out for the first time, adjust the pressure knob clockwise.